




ACCELERATOR

ASSEMBLY DESCRIPTION

The Accelerator is used to provide spring-loaded jarring action, usually at a surface level. It stores its energy for when an overpull occurs. This will make the assembly accelerate upward to where the point of impact was, thus increasing the amount of force being generated. It may also act as a shock absorber for when assemblies are being used at shallow depths.

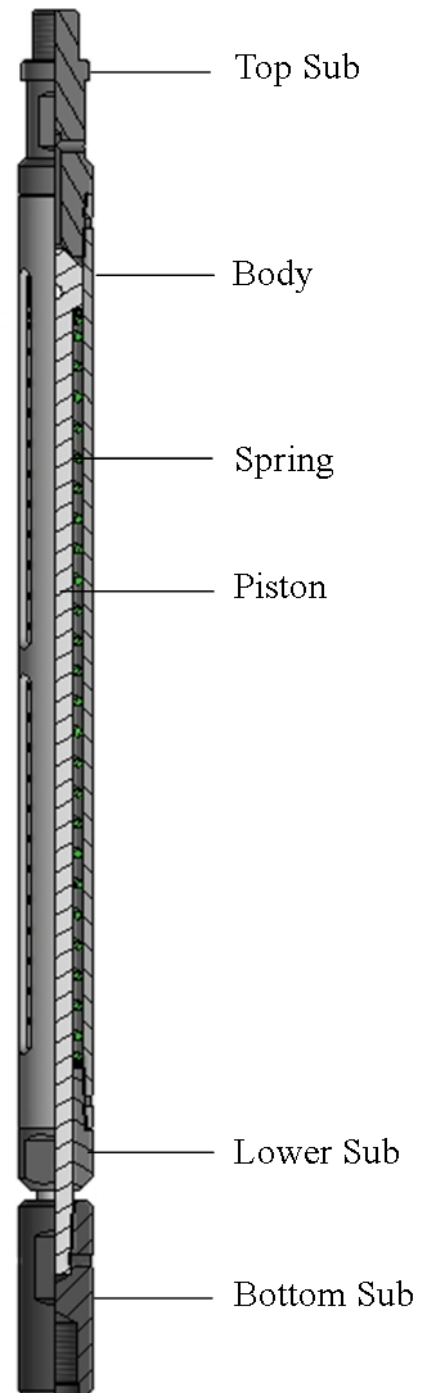



ACCELERATOR

SPECIFICATIONS			
	1.250	1.500	1.750
Fishneck	1.187	1.375	1.750
Connections	15/16"-10	15/16"-10	1-1/16"-10

SPECIFICATIONS			
	1.875	2.125	2.500
Fishneck	1.375	1.750	2.313
Connections	1-1/16"-10	1-1/16"-10	1-1/16"-10

All Specification Tables contain approximated dimensions and should be used for reference only.