




B SHIFTING TOOL

ASSEMBLY DESCRIPTION

The B & T B Shifting Tool is designed to selectively locate and shift most sliding sleeves. The keys engage the mandrel's inner sleeve, and depending upon the direction the tool is run, the sleeve is shifted up or down. The B Shifting Tool is designed to release only after the sleeve reaches its fully open or closed position.

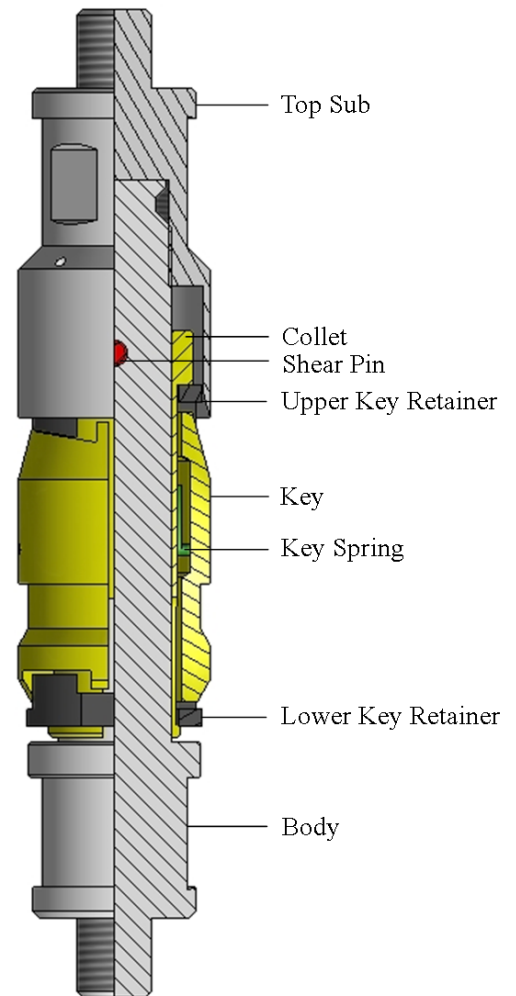



B SHIFTING TOOL

SPECIFICATIONS			
	1.500	1.625	1.710
Fishneck	1.188	1.188	1.188
Connections	15/16"-10	15/16"-10	15/16"-10

SPECIFICATIONS			
	1.781	1.875	2.125
Fishneck	1.375	1.375	1.375
Connections	15/16"-10	15/16"-10	15/16"-10

SPECIFICATIONS			
	2.188	2.313	2.562
Fishneck	1.750	1.750	1.750
Connections	15/16"-10	15/16"-10	15/16"-10

SPECIFICATIONS			
	2.750	2.813	3.313
Fishneck	2.313	2.313	2.313
Connections	1-1/16"-10	1-1/16"-10	1-1/16"-10

SPECIFICATIONS			
	3.437	3.688	3.813
Fishneck	2.313	3.125	3.125
Connections	1-1/16"-10	1-1/16"-10	1-1/16"-10

SPECIFICATIONS			
	4.313	4.562	
Fishneck	3.125	3.125	
Connections	1-1/16"-10	1-1/16"-10	

All Specification Tables contain approximated dimensions and should be used for reference only.