




# DUAL-FLAPPER PUMP THRU PLUG

## ASSEMBLY DESCRIPTION

The B & T Dual-Flapper Pump Thru Plug is used to prevent pressure from pushing up through the assembly. This tool can be used in conjunction with a B & T R Lock or a B & T X Lock.

An equalizing Prong is used to knock the collet of the XX or RR Equalizing Sub off seat, which will then allow pressure equalization.

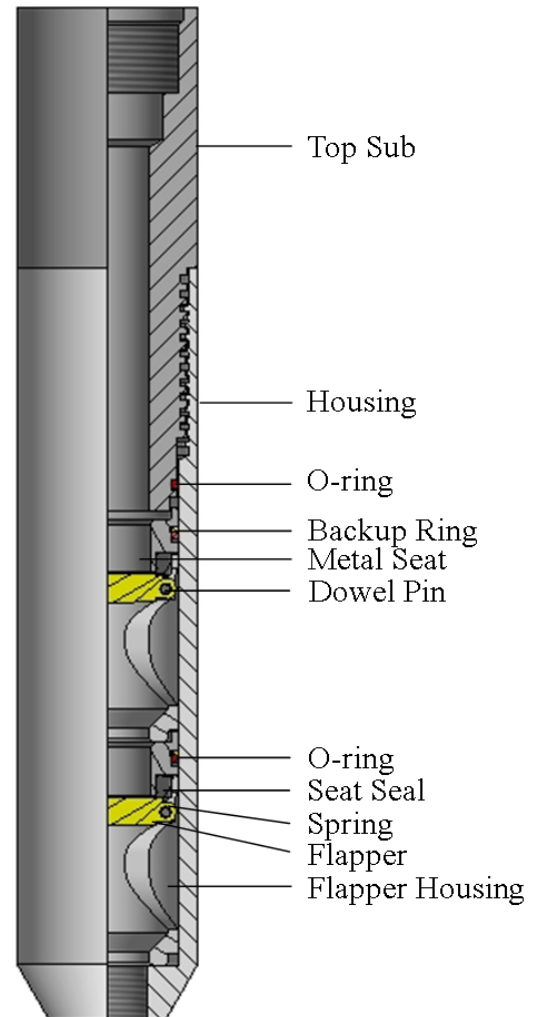



## DUAL-FLAPPER PUMP THRU PLUG

SPECIFICATIONS				
	1.500	1.710	1.875	2.313
Fishneck	1.330	1.490	1.740	2.130
Top Connection	1-1/8"-16	1-1/8"-16	1-3/8"-14	1-3/4"-12
Bottom Connection	3/8" NPT	3/8" NPT	1/2" NPT	3/4" NPT

All Specification Tables contain approximated dimensions and should be used for reference only.