




F COLLAR STOP RUNNING TOOL

ASSEMBLY DESCRIPTION

The B & T F Collar Stop Running Tool is used to set the F Collar Stop.

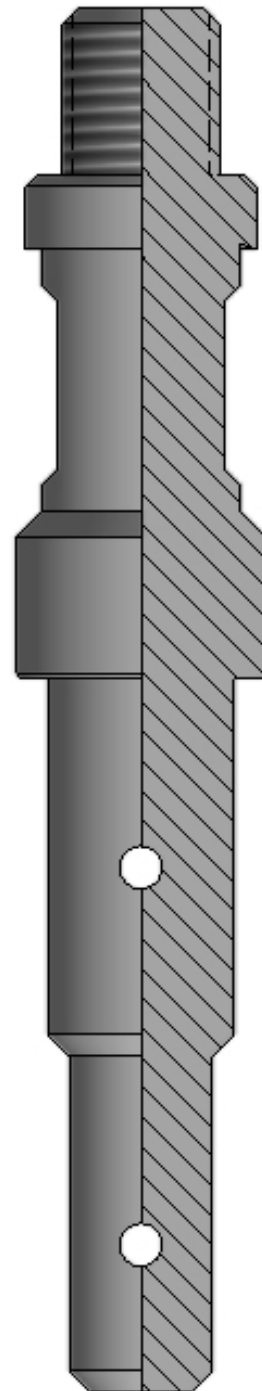



F COLLAR STOP RUNNING TOOL

SPECIFICATIONS			
	2.000	2.500	3.000
Fishneck	1.375	1.375	1.750
Maximum O.D.	1.500	1.500	2.000
Connection	15/16"-10	15/16"-10	15/16"-10
Steel Pin	1/4" X 1-3/16"	1/4" X 1-1/2"	1/4" X 2"

All Specification Tables contain approximated dimensions and should be used for reference only.