




## F COLLAR STOP

### ASSEMBLY DESCRIPTION

The B & T F Collar Stop locates in the recess of A.P.I. upset and non-upset tubing. The stop is lowered to the required depth, and then lifted upward. This motion will trip the latch springs, and the arms will then engage the collar recess. Jarring downward locks the arms into place.

B & T also manufactures special F Collar Stops with threaded ends to connect to different pieces of tool string.

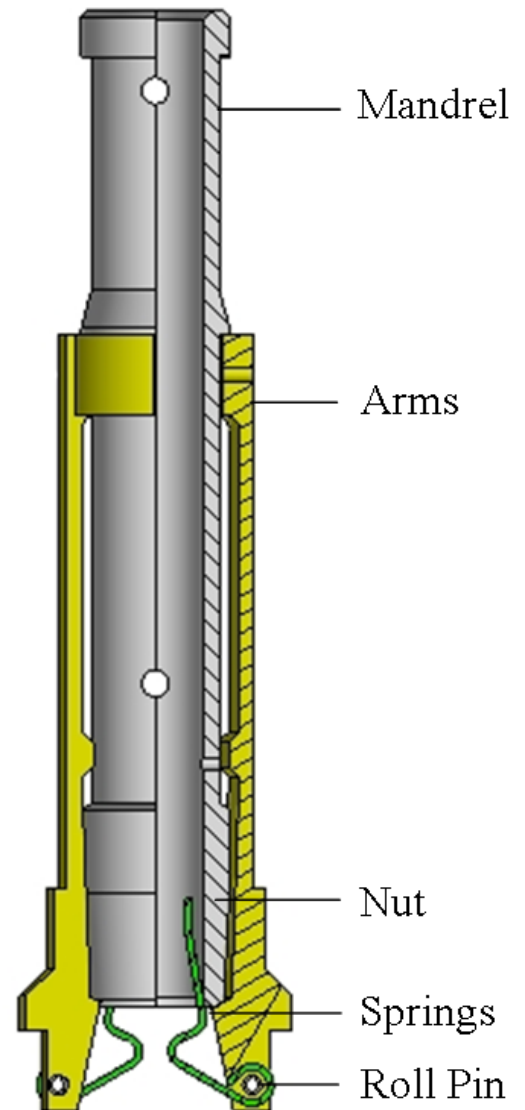



## F COLLAR STOP

SPECIFICATIONS			
	2.000	2.500	3.000
Fishneck	1.375	1.750	2.313
Minimum I.D.	0.875	1.125	1.688
Pulling Tool	JDCBT-02000-01	JDCBT-02500-01	JDCBT-03000-01

All Specification Tables contain approximated dimensions and should be used for reference only.