




FWB BOMB HANGER

ASSEMBLY DESCRIPTION

The FWB Bomb Hanger is used to land and lock downhole measuring instruments in TF Profiles.

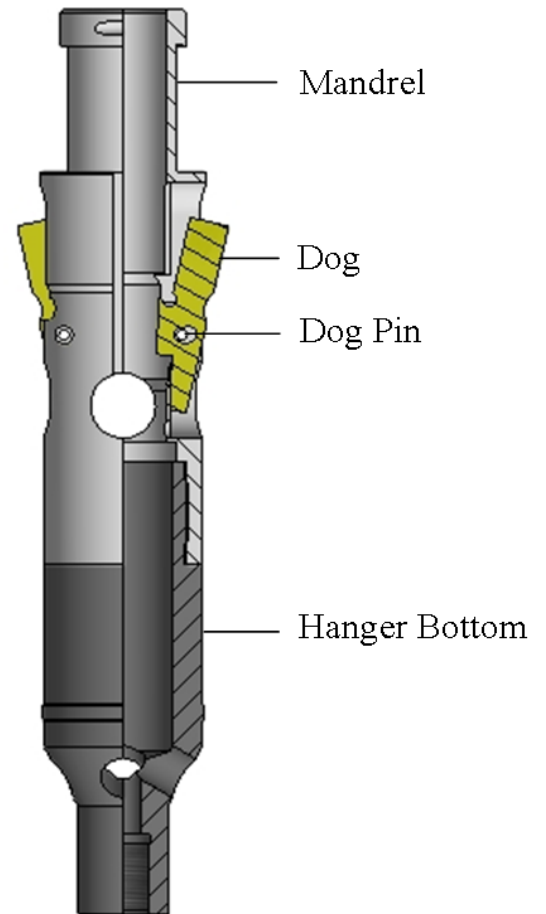



FWB BOMB HANGER

SPECIFICATIONS				
	1.500	1.780	1.810	1.870
Fishneck	1.188	1.375	1.375	1.375
No-Go O.D.	1.490	1.802	1.865	1.906
Length	11.516	11.516	11.516	11.516
Running Tool	C1RT-01500-01	C1RT-02000-01	C1RT-02000-01	C1RT-02000-01
Pulling Tool	SBPT-01500-01	SBPT-02000-01	SBPT-02000-01	SBPT-02000-01
Pulling Prong	BBPO-01500-04	BBPO-02000-04	BBPO-02000-04	BBPO-02000-04

SPECIFICATIONS				
	2.250	2.310	2.560	2.750
Fishneck	1.750	1.750	1.750	2.313
No-Go O.D.	2.302	2.365	2.625	2.802
Length	12.517	12.517	13.320	12.407
Running Tool	C1RT-02500-01	C1RT-02500-01	C1RT-02500-01	C1RT-03000-01
Pulling Tool	SBPT-02500-01	SBPT-02500-01	SBPT-02500-01	SBPT-03000-01
Pulling Prong	BBPO-02000-04	BBPO-02500-04	BBPO-02560-04	BBPO-03000-04

SPECIFICATIONS				
	2.810	3.688	3.750	3.810
Fishneck	2.313	3.125	3.125	3.125
No-Go O.D.	2.865	3.740	3.802	3.864
Length	12.407	14.102	14.102	14.102
Running Tool	C1RT-03000-01	C1RT-04000-01	C1RT-04000-01	C1RT-04000-01
Pulling Tool	SBPT-03000-01	SBPT-04000-01	SBPT-04000-01	SBPT-04000-01
Pulling Prong	BBPO-03000-04	BBPO-04000-04	BBPO-04000-04	BBPO-04000-04

All Specification Tables contain approximated dimensions and should be used for reference only.