




## J LATCH SOFT RELEASE

### ASSEMBLY DESCRIPTION

The J Latch Soft Release is used to set Bottom Hole Pressure Gauges.

The J Head is released by the weight of the tool string. The J Fishneck is left downhole with the Bottom Hole Pressure Gauges for retrieval at a later date.

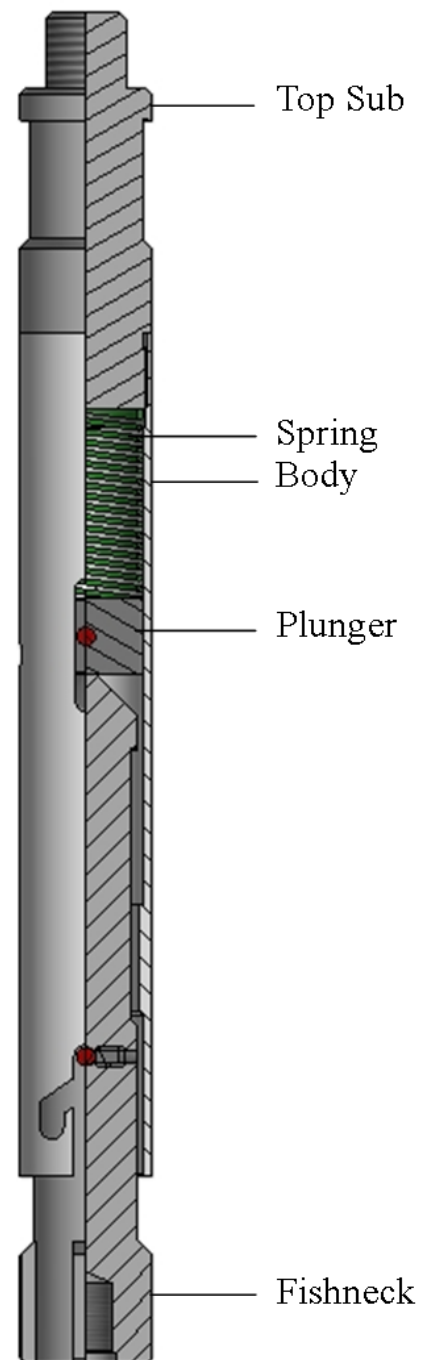



## J LATCH SOFT RELEASE

SPECIFICATIONS		
	1.500	1.750
Fishneck	1.375	1.750
Connections	15/16"-10	1-1/16"-10

All Specification Tables contain approximated dimensions and should be used for reference only.