




NIPPLE LOCATOR

ASSEMBLY DESCRIPTION

The Nipple Locator indicates where the Landing Nipple is located downhole. The Collet of the Nipple Locator is stopped at the restriction and must be tapped through the restriction, thereby indicating the true depth of the nipple.

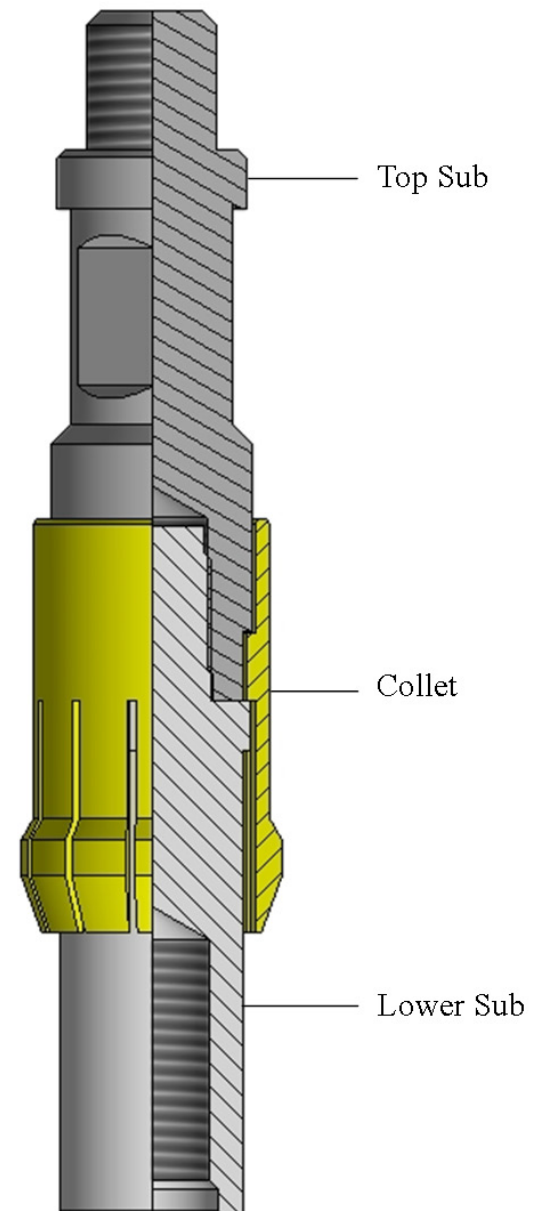



NIPPLE LOCATOR

SPECIFICATIONS			
	1.875	2.188	2.313
Fishneck	1.375	1.375	1.375
Connections	15/16"-10	15/16"-10	15/16"-10

SPECIFICATIONS			
	2.750	2.813	
Fishneck	1.375	1.375	
Connections	15/16"-10	15/16"-10	

All Specification Tables contain approximated dimensions and should be used for reference only.