




B & T R PLUG

ASSEMBLY DESCRIPTION

The B & T R Plug is a positive plug used in conjunction with the B & T R Lock to hold pressure from above and below. This plug can be used to test tubing or to plug tubing while doing repairs to surface equipment.

An equalizing Prong is used to knock the collet off seat of the B & T RR Equalizing Sub which allows pressure equalization.

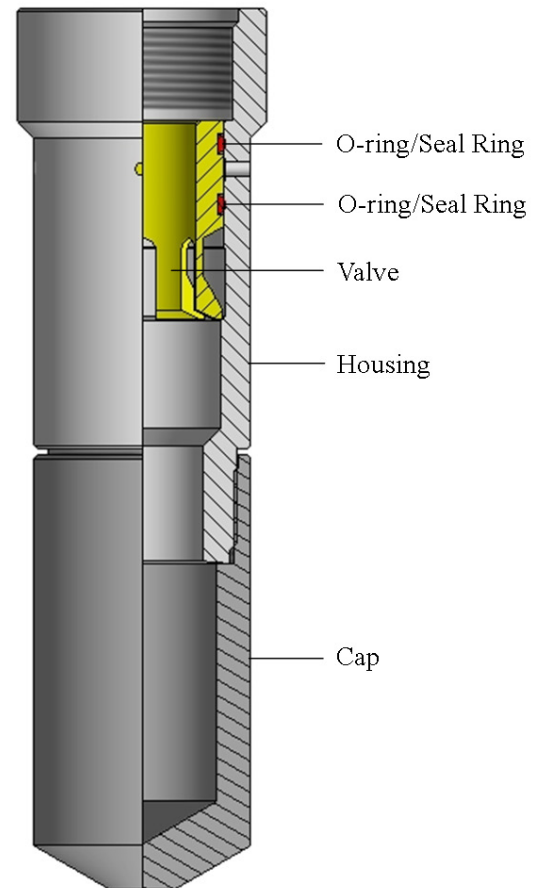



B & T R PLUG

SPECIFICATIONS				
	1.710	1.781	1.875	2.000
No-Go O.D.	1.700	1.770	1.865	1.990
Connection	1-1/8"-16	1-3/8"-14	1-3/8"-14	1-3/8"-14

SPECIFICATIONS				
	2.125	2.188	2.313	2.562
No-Go O.D.	2.115	2.175	2.300	2.550
Connection	1-3/8"-14	1-3/4"-12	1-3/4"-12	2"-12

SPECIFICATIONS				
	2.750	2.813	3.437	3.688
No-Go O.D.	2.740	2.803	3.425	3.670
Connection	2-1/4"-12 SLB	2-1/4"-12 SLB	2-3/4"-12 SLB	2-3/16"-12 SLB

SPECIFICATIONS				
	3.813			
No-Go O.D.	3.805			
Connection	3-1/16"-12 SLB			

All Specification Tables contain approximated dimensions and should be used for reference only.