




B & T S LOCATOR

ASSEMBLY DESCRIPTION

The B & T S Locator is made up to the bottom of the B & T S Lock to set in B & T S Landing Nipples. By changing the position of the Keys, the operator may set the lock in one of five different nipples in the tubing string. The spring loaded Keys locate the corresponding Landing Nipple and prevent the lock from traveling out of the bottom of that nipple. Once this is accomplished, the lock would hold pressure from below.

Please specify what position Keys are required when ordering.

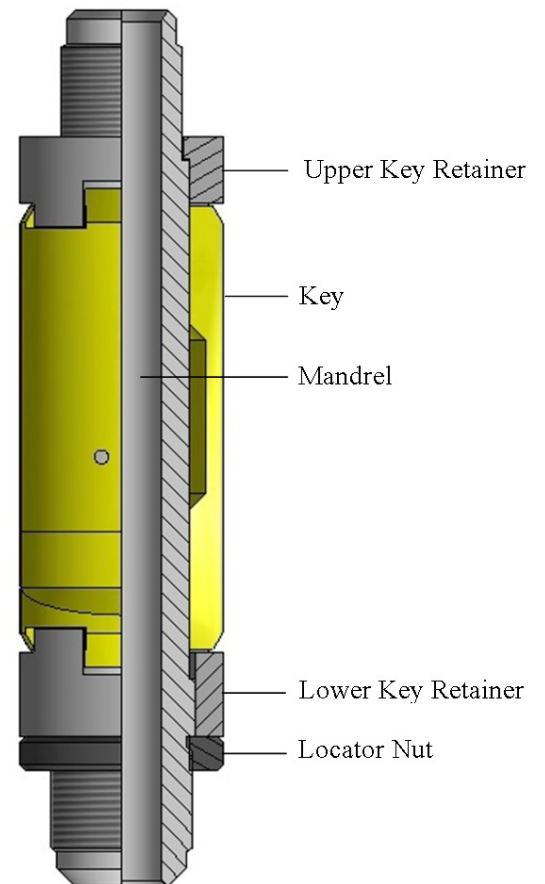



B & T S LOCATOR

SPECIFICATIONS		
	1.875	2.313
Maximum O.D. (Keys Retracted)	1.813	2.203
Minimum I.D.	0.703	0.875
Top Connection	1-1/8"-12	1-11/32"-14
Bottom Connection	1-3/16"-14	1-9/16"-12

All Specification Tables contain approximated dimensions and should be used for reference only.