




B & T XR PUMP THRU PLUG (TYPE T)

ASSEMBLY DESCRIPTION

The B & T XR Pump Thru Plug is a Ball, Seat, and Spring style pump thru plug. It is used in conjunction with Locks and other equalizing devices. The B & T XR Pump Thru Plug holds pressure from below.

An equalizing Prong is used to knock the collet of the XX or RR Equalizing Sub off seat which then allows pressure equalization.

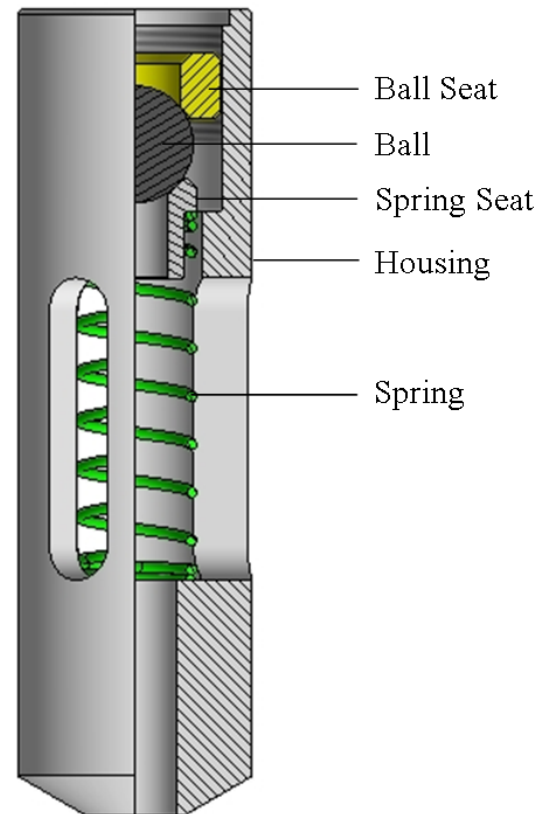



B & T XR PUMP THRU PLUG (TYPE T)

SPECIFICATIONS				
	1.500	2.000	2.500	3.000
Maximum O.D.	1.325	1.750	2.000	2.750
Connection	1-1/8"-16	1-3/8"-14	1-3/4"-12	2-1/4"-12

All Specification Tables contain approximated dimensions and should be used for reference only.