




OK-1 KICKOVER TOOL

ASSEMBLY DESCRIPTION

The OK-1 Kickover Tool is used in order to install and retrieve 1" O.D. gas lift valves into side-pocket mandrels containing an orienting sleeve.

The OK-1 Kickover Tool must be disassembled in order to be repinned.

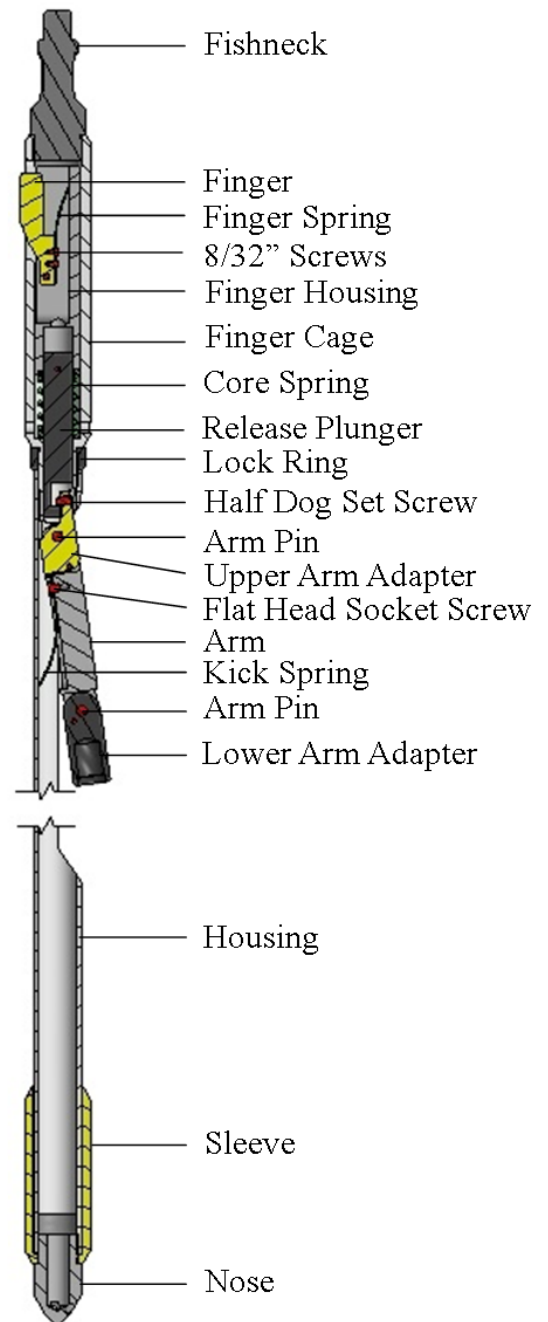



OK-1 KICKOVER TOOL

SPECIFICATIONS				
	2.000	2.500	3.000	4.000
Fishneck	1.375	1.375	1.375	1.375
Maximum O.D.	1.859	2.219	2.718	3.710
Connections	15/16"-10	15/16"-10	15/16"-10	15/16"-10
Length	72.688	72.688	76.500	76.500
Steel Pin- Finger	1/4" X 1-1/2"	1/4" X 1-1/2"	1/4" X 1-1/4"	1/4" X 1-1/4"
Steel Pin- Plunger	3/16" 1-1/2"	3/16" 1-1/2"	3/16" X 2-3/8"	3/16" X 1-7/8"
Brass Pin- Arm Adapter	3/16" X 1-1/4"	3/16" X 1-1/4"	3/16" X 1-1/4"	3/16" X 1-1/4"
Brass Pin- Lower Adapter	3/16" X 1-1/4"	3/16" X 1-1/4"	3/16" X 1-1/4"	3/16" X 1-1/4"

All Specification Tables contain approximated dimensions and should be used for reference only.