




## ROPE SOCKET (NO-KNOT)

### ASSEMBLY DESCRIPTION

The No-Knot Rope Socket is used to connect the wireline to the wireline tool string. The line is run through the Body and Sleeve, with the line set in the groove of the Wedge. The line is set when the Wedge is pulled tightly into the Sleeve.

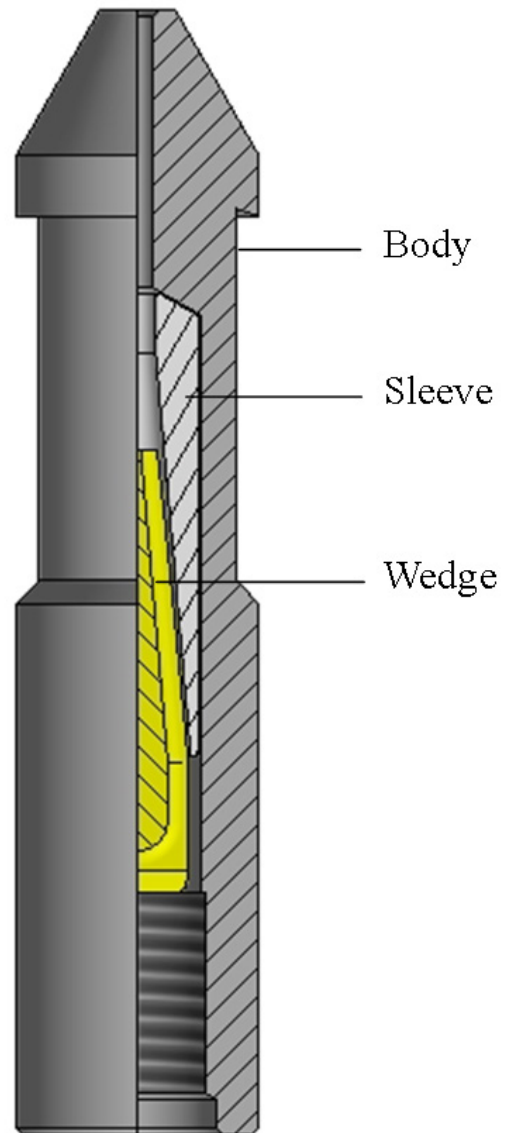



## ROPE SOCKET (NO-KNOT)

| SPECIFICATIONS |           |           |            |
|----------------|-----------|-----------|------------|
|                | 1.250     | 1.500     | 1.750      |
| Fishneck       | 1.188     | 1.375     | 1.750      |
| Connection     | 15/16"-10 | 15/16"-10 | 1-1/16"-10 |

| SPECIFICATIONS |            |            |            |
|----------------|------------|------------|------------|
|                | 1.875      | 2.125      | 2.500      |
| Fishneck       | 1.750      | 1.750      | 2.313      |
| Connection     | 1-1/16"-10 | 1-1/16"-10 | 1-9/16"-10 |

All Specification Tables contain approximated dimensions and should be used for reference only.