



R PULLING TOOL

ASSEMBLY DESCRIPTION

The B & T R Pulling Tool is a shear up releasing tool designed to pull equipment with an external fishneck.


The following Cores are available for the R Pulling Tool:

*The B Core is a long Core, and offers a short reach.

*The S Core is a medium length, and offers a medium reach.

*The J Core is a short Core, and offers a long reach.

*The Q Core is unique in that it latches onto male connectors, and is a very short Core.

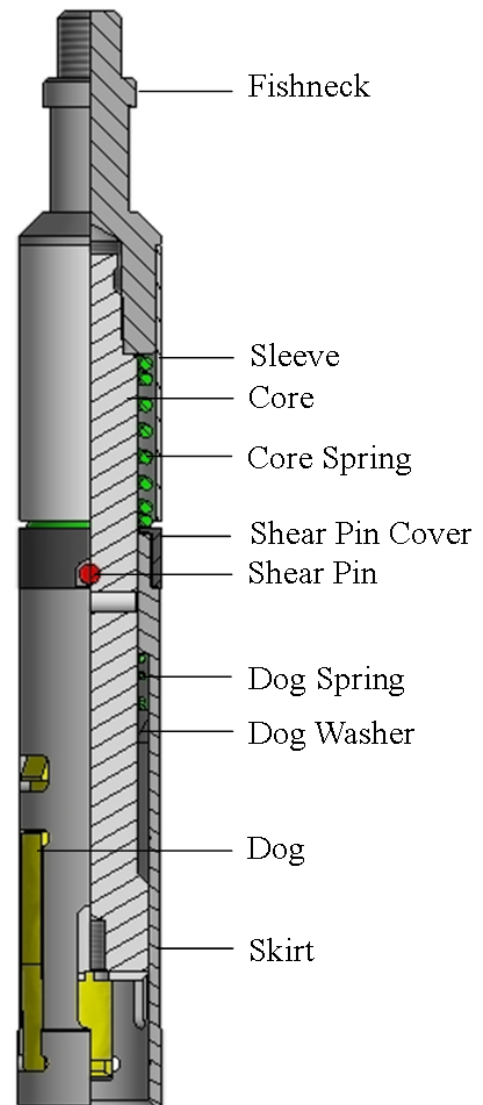



R PULLING TOOL

SPECIFICATIONS				
	1.000	1.250	1.500	2.000
Fishneck	0.750	1.000	1.188	1.375
Maximum O.D.	0.970	1.220	1.425	1.770
Connections	5/8"-11	5/8"-11	15/16"-10	15/16"-10
B Core Reach	1.328	1.218	1.265	1.219
J Core Reach		2.125	2.547	2.547
S Core Reach	1.000	1.843	1.797	1.984

SPECIFICATIONS				
	2.500	3.000	4.000	
Fishneck	1.375	2.313	2.313	
Maximum O.D.	2.170	2.720	3.660	
Connections	15/16"-10	1-1/16"-10	1-1/16"-10	
B Core Reach	1.203	1.297	1.490	
J Core Reach	2.547	2.609	2.720	
S Core Reach	1.984	2.190	2.240	

All Specification Tables contain approximated dimensions and should be used for reference only.